 




## Operating Instructions Alarm Clock Model: DG-C4X



## OVERVIEW

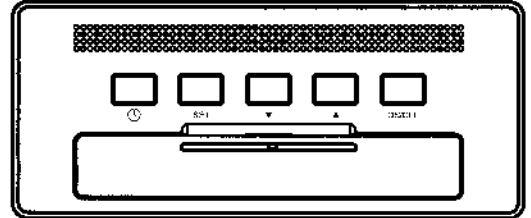

## FUNCTIONS

- Time in 12/24H
- Built-in Calendar and Weekday
- Alarm with Snooze Function
- Indoor Temperature and Humidity
- Backlight
- Power Cut Memory Function
- Low Battery Indicator

## GETTING STARTED

Open the battery compartment cover.  
Insert 2 x AA (LR06) batteries according to the correct polarity showed in the compartment.

## POWER CUT MEMORY FUNCTION

When the power is cut off, re-assemble the batteries (2 x AA / LR06) into the battery compartment within 30 seconds, the preset time will be memorized. Users don't have to reset time.


## TIME SETTING

1. Press and hold **SET** button for 2 seconds to enter time setting mode. The setting digits will be flashing.
2. Press **▼** or **▲** button to set desired values.
3. Press and hold **▼** or **▲** button to fast advance the values.
4. Press **SET** button to confirm the setting item and the next item to be set will be flashing.
5. The setting sequence is :Hour →Minute→Year→Month →Date→Exit
6. Press **SET** button to confirm the setting.

### NOTE:




If there is no operation in 20 seconds, it will exit automatically.  
There would be AM/PM indicator while setting.  
Press **▲** button to alternate between 12/24H format.

## ALARM SETTING

1. Press **⌚** button to check alarm time.
2. Press and hold **⌚** to enter alarm setting mode.
3. The setting item will be flashing.
4. Press **▼** or **▲** button to set desired values.
5. Press and hold **▼** or **▲** button to fast advance the values.
6. The setting sequence is Hour →Minute.
7. Press **⌚** button to confirm the setting.
8. To activate the alarm, press the **ON/OFF** button. If the alarm is activated, the alarm symbol  appears on the LCD.

NOTE: When alarm time is up, it rings for 2 minutes.

## SNOOZE FUNCTION

1. When the alarm sounds, press **SNOOZE/LIGHT** button to have 5 minutes' snooze time. The alarm symbol  will be flashing and the alarm will sound again in 5 minutes. The snooze function has no limit and will repeat infinitely.
2. When the alarm sounds, press any other button than **SNOOZE/LIGHT** button and **ON/OFF** button to stop the alarm. The alarm symbol  will stay on the screen and the alarm will be activated again the next day.
3. To cancel the alarm, press the **ON/OFF** button. The alarm symbol  will be disappeared.

## TEMPERATURE AND HUMIDITY

1. Indoor temperature range :-10°C to 50°C
2. Indoor Humidity range: 10%RH-99%RH

## BACKLIGHT

Press **SNOOZE/LIGHT** button to turn on the backlight lasting for 10 seconds.

## PRECAUTIONS

1. Do not clean any part of the product with benzene, thinner or other solvent chemicals. When necessary, clean it with a soft cloth.
2. Never immerse the product in water. This will damage the product.
3. Do not subject the product to extreme force, shock, or fluctuations in temperature or humidity.
4. Do not tamper with the internal components.
5. Do not mix new and old batteries or batteries of different types.
6. Do not mix alkaline, standard or rechargeable batteries with this product.
7. Remove the batteries if storing this product for a long period of time.
8. Do not dispose of this product as unsorted municipal waste. Collection of such waste separately for special treatment is necessary.